


**Borrowed Lite on Floor Assembly**

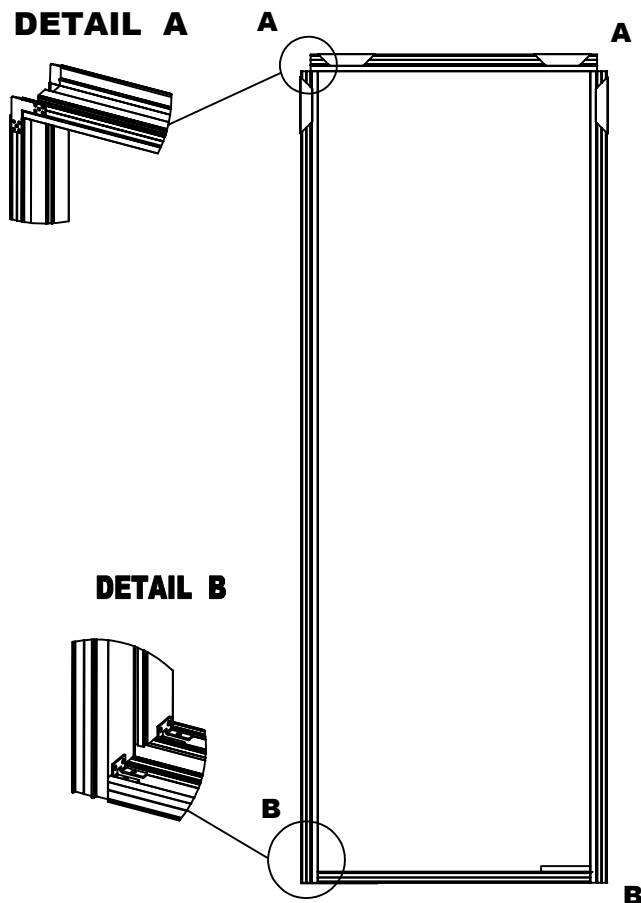

1. Check opening for accuracy (including; wall condition, rough opening both height, and width, and door swing)
2. Slip the head component over the wall, and then both leg components. Ensure the head stops seats on the uprights
3. Insert corner clip (A), ensuring the inside corner fits tightly to vertical and horizontal frame components. Ensure the vertical leg, and head are plumb, and square before attaching
4. Attach sill starter to floor
5. Slip the bottom component over sill starter
6. Insert sill clips (B), ensuring the inside corner fits tightly to vertical and horizontal frame components
7. Frame should be checked to ensure it is plumb, level, and square prior to continuing
8. Secure clips with minimum of four fasteners (provided) per component, do this for remaining corners
9. Secure frame to wall using field supplied fasteners, apply a fastener to each available pre-punched hole.
10. Verify the inside dimension at the head is the same as the bottom, and the top and bottom inside dimensions are the same
11. Snap on trim by following provided instructions