Architectural Components

DOORMERICA® Products

Aluminum Frame and Sidelite Installation

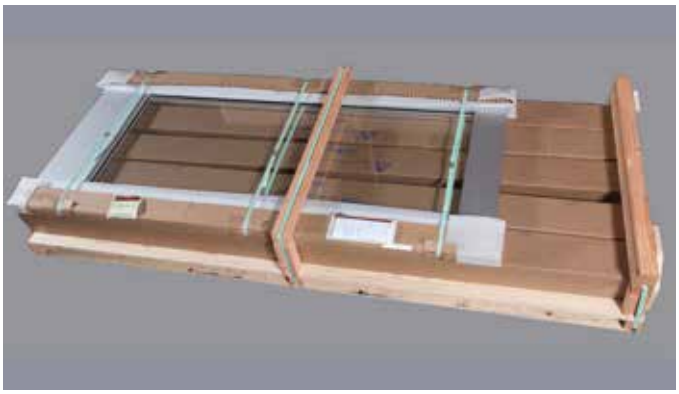

How material arrives

Opened boxes with wrapped material

Material all unwrapped, all frame components are labeled (except trim pieces)

1

Measure opening width:
1) Top
2) Middle
3) Bottom

Measure opening height:
4) Left
5) Middle
6) Right

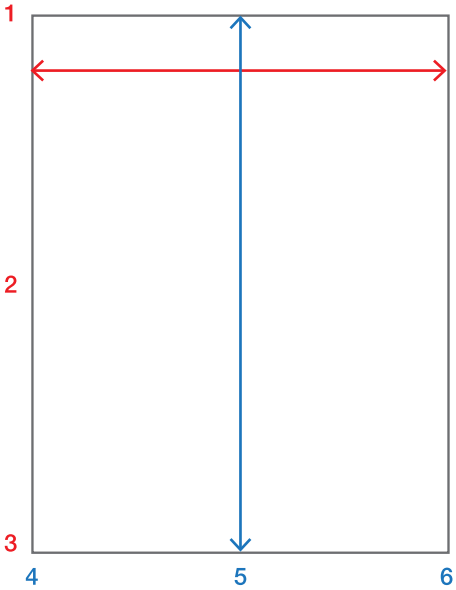

2

Insert frame head of door opening

3

Insert leg - butting up into frame. Check for plumb.

4

Make sure head and leg are tight. Install corner clips on both sides. Check for square.

5

Install T-clip and check for square.

6

Insert sidelite head and secure to T-clips on both sides.

7

Insert sidelite leg and check for square. Secure corner clips. Confirm door frame is plumb, and secure frame flanges on both sides to wall with screws (recommend drywall screws).

8

Install sill starter for sidelite and secure to floor

9

Install sill over sill starter. Shim 1/8" off floor to ease for trim installation. Secure sill to sill starter with provided screws. Install sill clips.

10

Install trim (1-1/2), "Roll" trim from the outside in. Trim is pre-notched for hinges and strikes. Some notching may be required at mullions.